

DMX512 13 Channel list

No	Function	Illustrate
1	PAN	0—255 0° ---540°
2	PAN fine	0—255
3	TILT	0--127 ,360° stroke positioning 128—191, Forward rotation from fast to slow 192—255, Reverse rotation from slow to fast
4	TILT fine	0—255 (When CH3 in 0-127 is enable)
5	Function	0--69, No function 70--79, when pan or tilt moves, lamp off is effective 80-59, when pan or tilt moves, lamp off is ineffective 90--199, No function 200—209 all reset, 210-249 No function 250—255 random sound(enable after 5s)
6	Dimmer	R、G、B、W dimmer, from dark to bright
7	Shutter	0-9 No strobe, 10-255 strobe from slow to fast
8	Dimmer R	R dimmer, from dark to bright
...
11	Dimmer W	W dimmer, from dark to bright
12	Color	0-7 No function 8-127 15 fixed color 128-191 color jump, 192-255 color gradient
13	Color speed	0--255, from dark to bright

LED Moving Head Light Features

Light source: 1pcs *40W LED (RGBW)

Voltage: AC100-240V 50-60HZ

Power: 40W

Channel: 9/13CH

.Multi-colors .color Strobe

.Electronic dimming 0-100%

.Auto , Sound active .DMX. RGBW

Stand Alone or Master- Slave Configuration

330*250*270mm Weight: 3.5KG

LED MOVING HEAD LIGHT

User Manual



Please read over this user manual before using product

LED Moving Head Light Panel



- A. MODE
- B. ENTER
- C. UP
- D. DOWN



A B C D

LED Moving Head Light LCD display

No.	Display	Function
1	ADDR	Address (001—512) B, C key to add and subtract address code values
2	CHND	9 or 17 channels address selection B, C key to add and subtract address code values
3	SLND	MAST, SL1, SL2 Mast and slave mode
4	SHND	SOUD, AUTO (Speed SP0-SP9)
5	SOUD	ON, OFF Sound Mode
6	SENS	Sound sensitivity control (0-100)
7	BLND	Yes, No Standby mode
8	LED	Background Light Switch
9	DISP	Reverse Display
10	PAN	PAN reverse
11	TILT	TILT reverse
12	MANU	PAN, TILT, RGBW DIMMER STROBE TEST
13	TEST	Auto test
14	RHRS	0—9999 Use Time Machine
15	VER	V104 Software version
15	RSET	YES, NO Restore factory settings

LED Moving Head Light channel list

DMX512 9 Channel list

No	Function	Illustrate
1	PAN	0--255 0---540°
2	TILT	0--127 ,360° stroke positioning 128—191, Forward rotation from fast to slow 192—255, Reverse rotation from slow to fast
3	Dimmer	R、G、B、W dimmer, from dark to bright
5	R Dimmer	R dimmer, from dark to bright
6	G Dimmer	G dimmer, from dark to bright
7	B Dimmer	B dimmer, from dark to bright
8	W Dimmer	W dimmer, from dark to bright
4	Shutter	0-15 lamp on , 16-131 strobe from slow to fast, 123-139 lamp on, 140-181 fast start off slow, 182-189 lamp on, 190-231 slow start off fast 232-239 lamp on, 240-247 random strobe 248-255 lamp on.
9	Function	0--69, No function 70--79, when pan or tilt moves, lamp off is effective 80-59, when pan or tilt moves, lamp off is ineffective 90--199, No function 200—209 all reset, 210-249 No function 250—255 random sound(enable after 5s)