

9-CHANNEL MODE											
240 - 255 Music control		Sensitivity 000 - 255									
232 - 239 Flow 9		Speed 000 - 255		Flow 8/9:		Flow 8/9:		Light 1 On 128 - 255		Light 2 On 128 - 255	
224 - 231 Flow 8				000 - 254 = 15 colour macro 1 255 = Blackout		017 - 255 = 15 colour macro 2 000 - 016 = Blackout					
216 - 223 Flow 7				Stroboscope 000 - 255							
208 - 215 Flow 6											
200 - 207 Flow 5											
192 - 199 Flow 4											
184 - 191 Flow 3											
176 - 183 Flow 2											
168 - 175 Flow 1											
160 - 167 Colour Change											
152 - 159 Colour Fade											
144 - 151 Meteor											
136 - 143 Dream		Master Dimmer 000 - 255		Red 000 - 255		Green 000 - 255		Blue 000 - 255		White 000 - 255	
128 - 135 RGBW											
120 - 127 RBW											
112 - 119 RGW											
104 - 111 GBW											
096 - 103 RGB											
088 - 095 RB											
080 - 087 GW											
072 - 079 RW											
064 - 071 BW											
056 - 063 GB											
048 - 055 RG											
040 - 047 White											
032 - 039 Blue											
024 - 031 Green											
016 - 023 Red											
000 - 015 Colour mixing Channel 4 - 7		CH2		CH3	CH4	CH5	CH6	CH7	CH8	CH9	
CH1											