

Display Control Instruction

Welcome to use our LED Flat Par Quad 7. The light uses energy-saving LED, long product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects. Four Digital display as showed below: switch operation interface, easy to operate, suitable for all types of entertainment, decoration, architectural lighting industry.

E


A: Function

B: Up

C: Down

D: Enter

E: LED Display




A B C D

Instructions: Press the function key A cycled out of the eight different functional effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

Product Introduction

- Power Supply : AC100-240V, 50Hz-60Hz
- Power consumption: 65W
- Fixing lamp: LED 7x12W Quad RGBW
- DMX-Control-channels: 4/8 DMX Channels
- Shuttle: Flash rate: 0-10Hz
- Dimmer: 0-100% mechanic dimmer
- Operational modes: DMX 512, Auto Run, Sound active, Strobe, Stand Alone and Master/Slave, With Rich Advanced Built-in Programs.
- Beam Angle: 25/35/40/45 degree
- Long Lifespan LEDs (more than 50,000 hours)
- Product dimension: 18x18x13cm
- Net Weight: 1.67 kg Gross weight: 1.7kg
- Packing size: 20x20x16cm

LED Flat SlimPar Quad 7 Light User's Manual

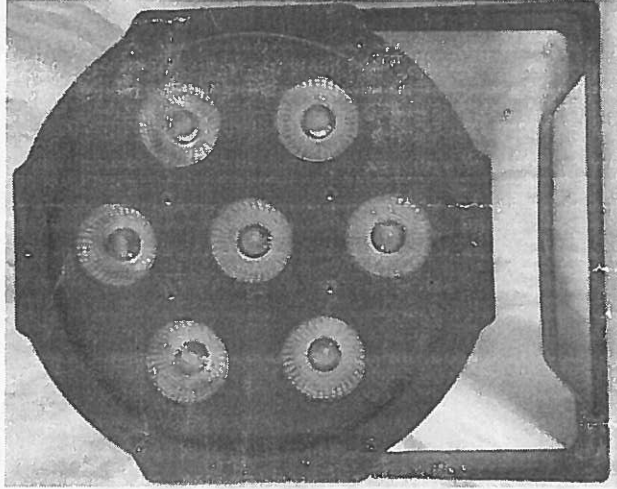

Please carefully read the product description before use

Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product

Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.
Please forgive that we will not be notice for technical change

Attention Item

1. For guarantee the life of product, please don't put it on the wet place and also not use it in the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +/- 10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low
5. After power off, if it is need used again, please cool down over 20 minutes.
6. Please look round the manual for ensure the product can be used normally.

DMX Channel Summary- 8 Channels Mode

CHANN EL	VALUE	FUNCTION
1	Total dimming	R, G, B, W, total dimming, linear dimming from dark to light
2	Total Strobe	R, G, B, W, total strobe, from slow to fast
3	Function selection	0-50: DMX eight-channel control 51 - 100: transition 101-150: gradient 151-200: Clock change 201-255: Sound Activate
4	Function Speed	Function speed, from slow to fast
5	Red	Red dimming, Linear dimming from dark to Bright
6	Green	Green dimming Linear dimming from dark to Bright
7	Blue	Blue dimming, Linear dimming from dark to Bright
8	White	White dimming, Linear dimming from dark to Bright

DMX Channel Summary- 4 Channels Mode

Channel	Value	Function
1	Red	Red dimming, (000—255)
2	Green	Green dimming, (000—255)
3	Blue	Blue dimming, (000—255)
4	White	White dimming, (000—255)

Display Control Instruction

No	Display	Function
1	D001	8-channel address code,(001—512) B, C key addition and subtraction address code value
2	A001	4-channel address code,(001—512) B, C key addition and subtraction address code value
3	CP00	Colorful clock change, gradual change, (01—99) B, C key modify the clock change, gradual speed
4	CC00	Colorful hopping, (01—99) B, C key modify the speed of transition
5	DEMO	Colorful portfolio changes, (01—99) B, C key modify the rate of change
6	BEBE	Colorful voice changes
7	R255	Red dimming, (000—255) B, C key to modify the color depth
8	G255	Green dimming, (000—255) B, C key to modify the color depth
9	B255	Blue dimming, (000—255) B, C key to modify the color depth
10	W255	White dimming, (000—255) B, C key to modify the color depth